



**New Working
New Living**

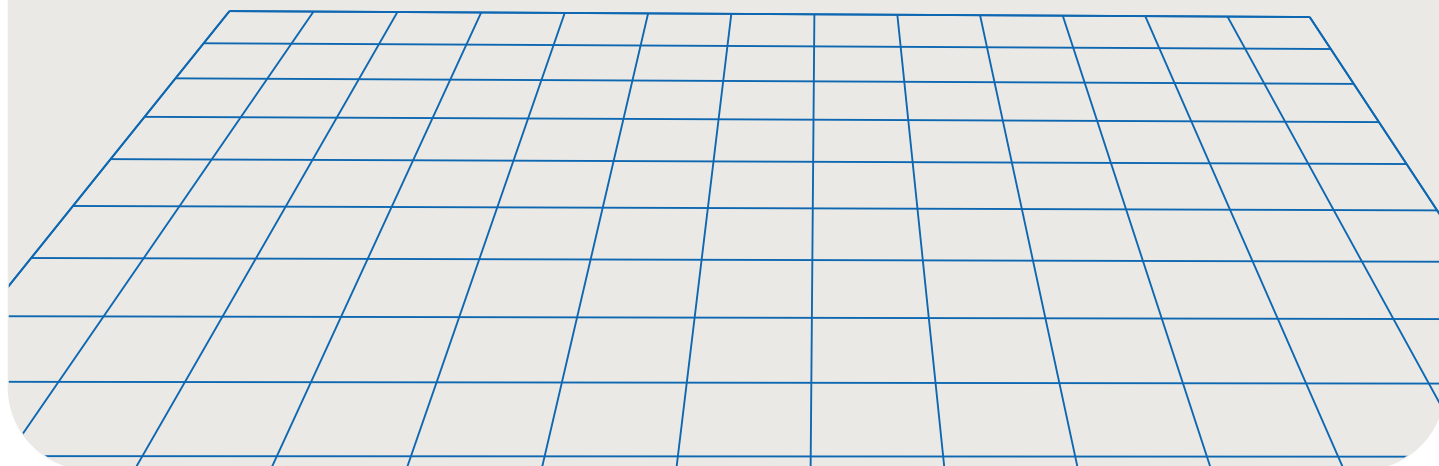

FlexiSpot


Item No. E7 Ultra
User Manual
使用手冊

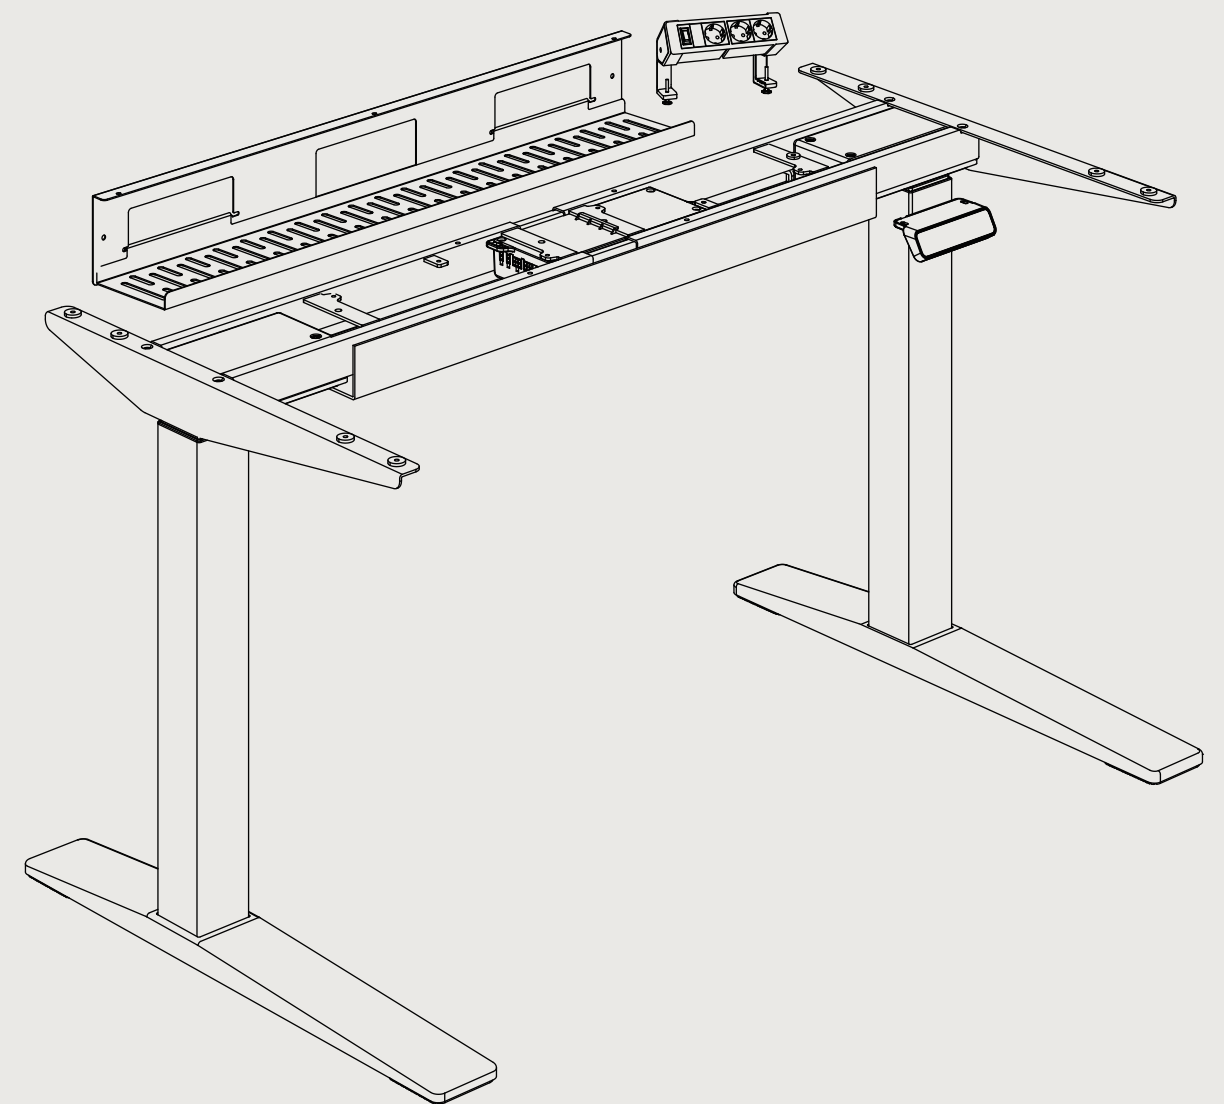


Specifications 規格

Column stage/ 立柱階數	3
Max. Load Capacity/ 最大承重	125KG
Max. Speed/ 最高速度	40mm/s
Lowest Height/ 最低高度	635mm
Highest Height/ 最高高度	1235mm
Applicable Tabletop Size 適用桌板尺寸	Length/長度：1200mm-2000mm
	Width/寬度：600mm-800mm
	Thickness/厚度：>18mm


Assembly Notes 組裝說明

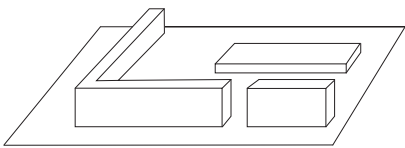

Installation need be done on a carpet to prevent scratches.
請在地毯上進行安裝，以防刮傷地面

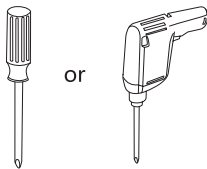

Installation will require a Phillips screwdriver or pistol drill.
安裝時需使用十字螺絲起子或電鑽

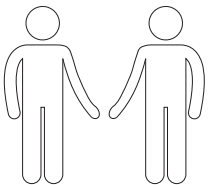


Installation must be done by at least two people.
安裝過程需至少兩人協作完成

Product List 產品列表

Accessory Package/配件包


Note: The line drawings below are for reference only and may differ slightom the physical product in some cases. Please refer to the actual product for accuracy. If any tools aremissing or there are problems with installation, please contact customer service.

注意：以下線條圖僅供參考，部分細節可能與實物略有差異。請以實物為準。如有工具缺失或安裝問題，請聯絡客服。

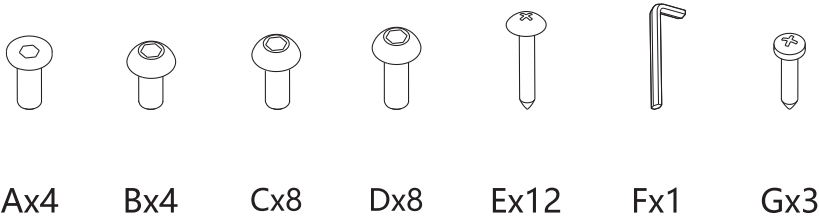


Parts Included 包含的零件

No.	Part 零件名稱	No.	Part 零件名稱
①	Support beam x1 支撐橫樑 x1	⑧	Cable management tray holder x1 理線托架支撐件 x1
②	Left column x1 左立柱 x1	⑨	Cable management tray x1 理線托盤 x1
③	Right column (with power strip) x1 右立柱 (附插座) x1	⑩	Pad x4 墊片 x4
④	Pedestal x2 底座 x2	⑪	Double-plug power cord x1 雙插電源線 x1
⑤	Left side bracket x1 左側支架 x1	⑫	Three-plug power cord x1 三插電源線 x1
⑥	Right side bracket x1 右側支架 x1	⑬	Handset x1 手控器 x1
⑦	Baffle x1 擋板 x1	⑭	Power strip clamping x1 插座固定夾 x1

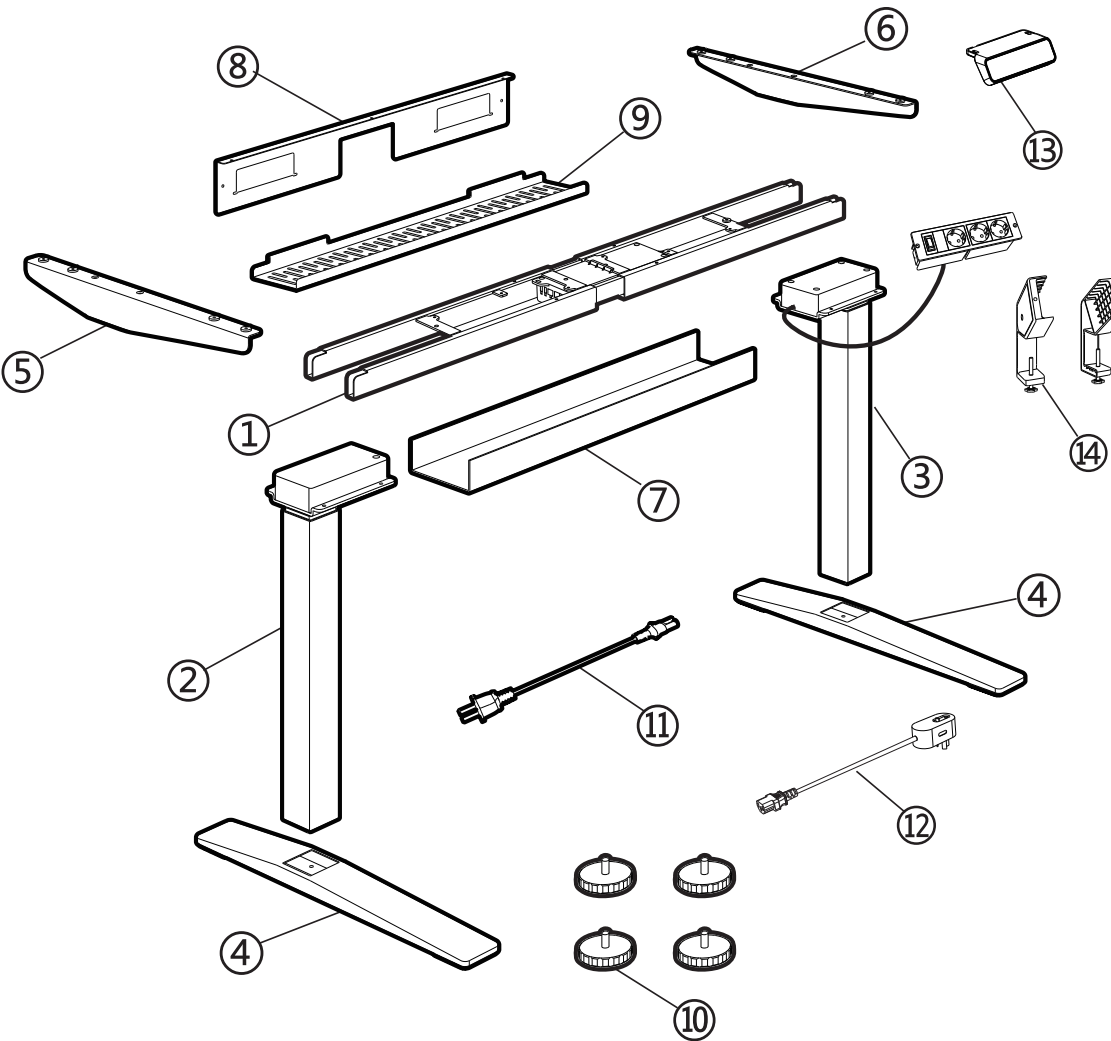


Assembly Steps 組裝步驟


 
STEP1 Install the bracket 安裝支架



It is suggested to raise the crossbeam to facilitate the installation of the support plate
建議抬高橫樑以便安裝支撐板

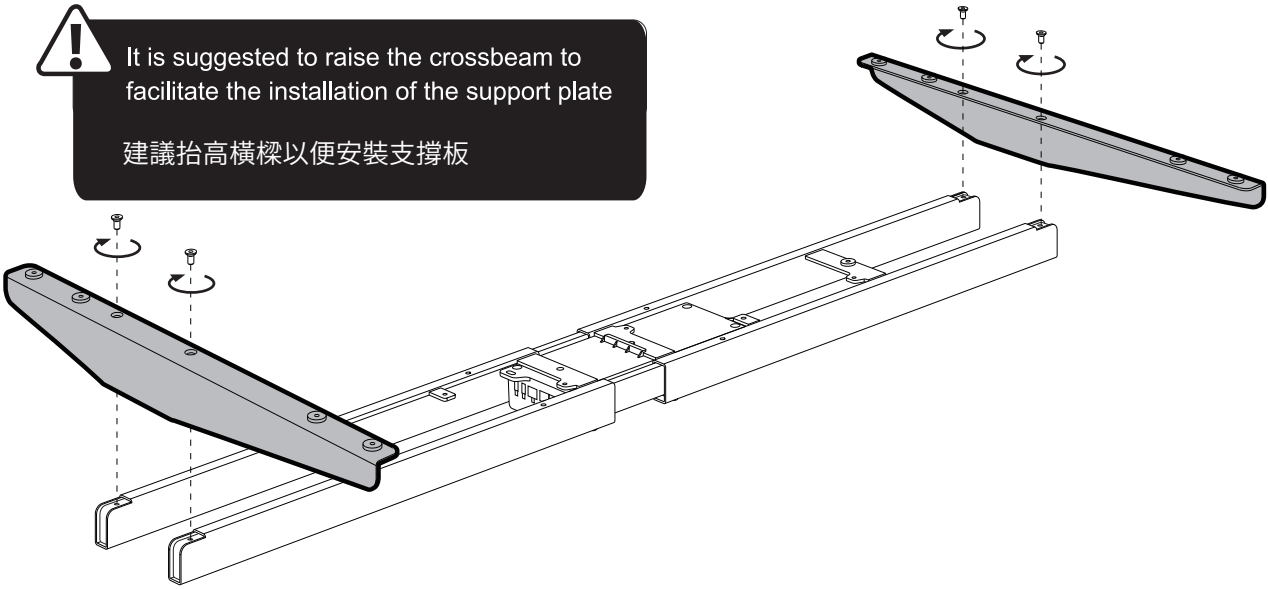


 STEP2 Stretch beam 拉伸橫樑

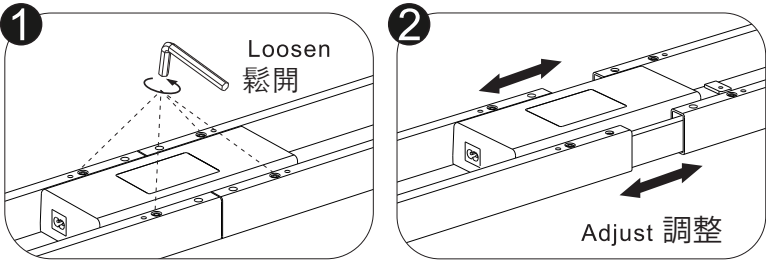


For self-provided tabletops, it is important to ensure sufficient strength. The reference value is 125kg, but the actual weight capacity may vary depending on the specific material of the tabletop.

若使用自備桌板，請務必確認其具備足夠的強度。參考承重值為 125 公斤，但實際承重能力會因桌板材質而異。

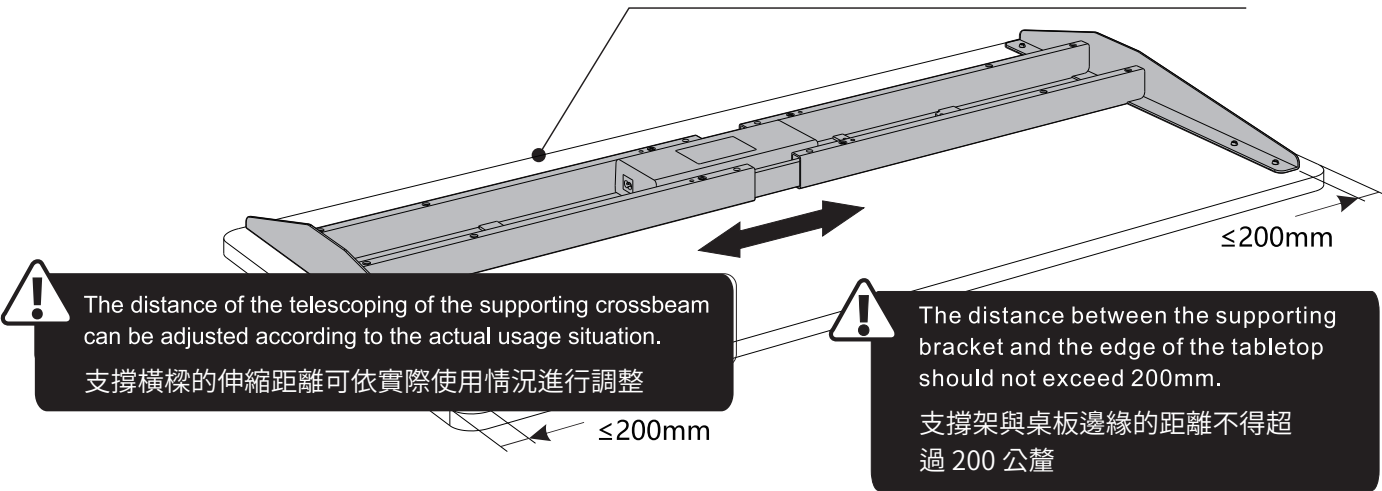


 STEP3 Install the Tabletop 安裝桌板





Self-prepared

The installation sequence for the screws is
螺絲的安裝順序如下所示

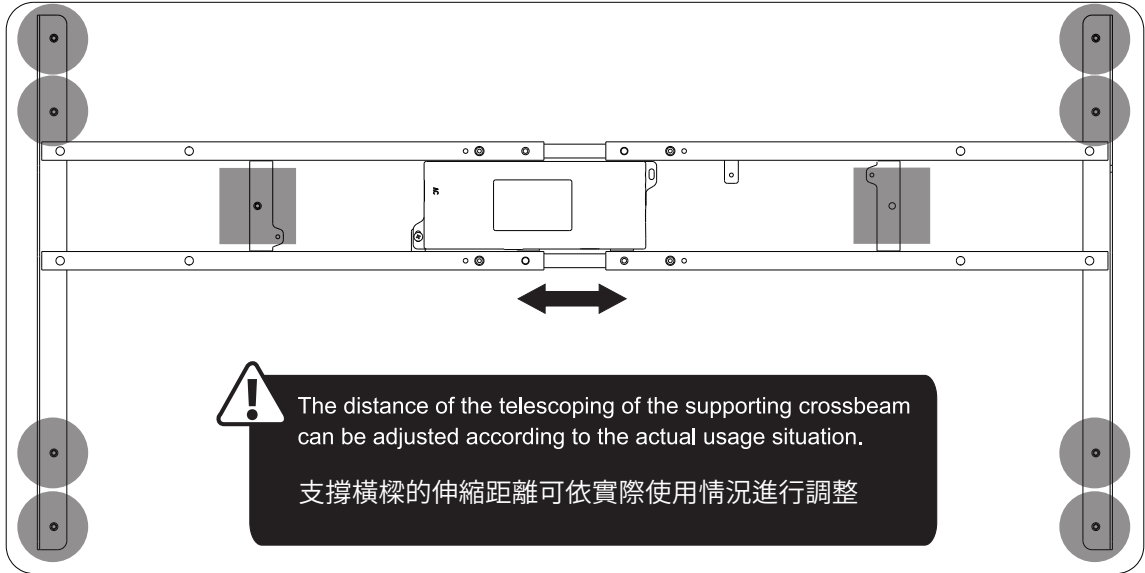

 
STEP4 Lock the crossbeam 鎖定橫樑

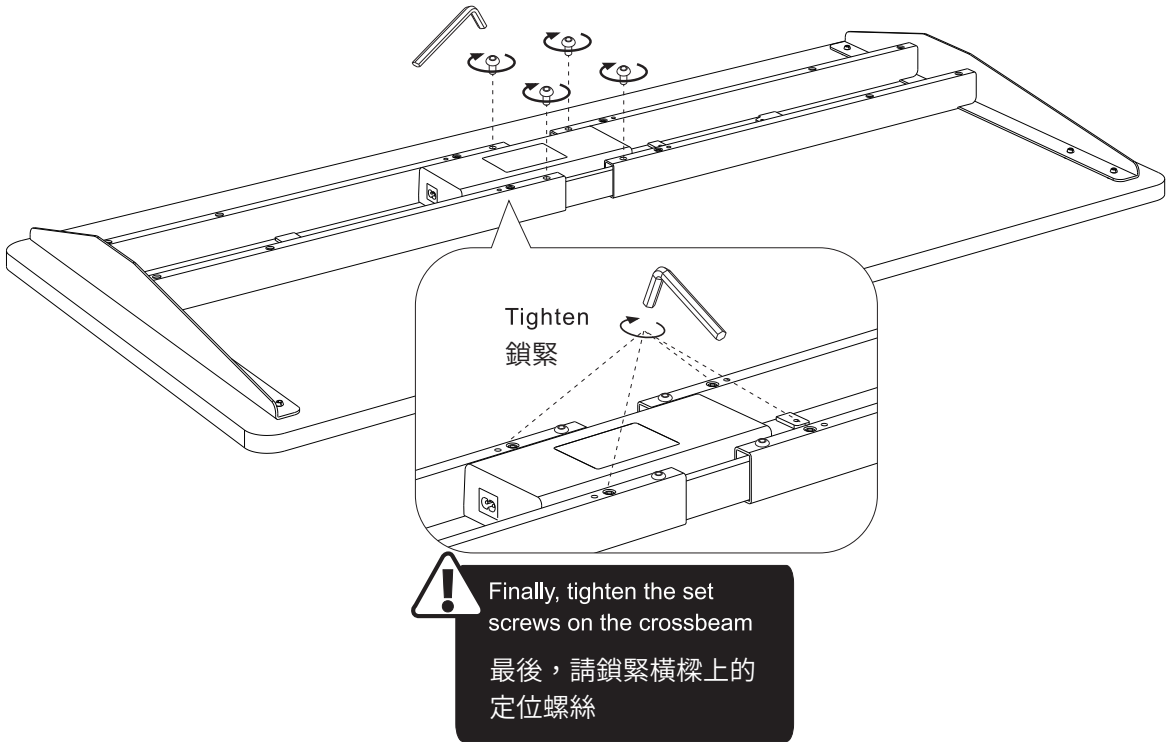

Assembly Steps 組裝步驟


STEP5 Install the columns 安裝立柱

C x8 F x1

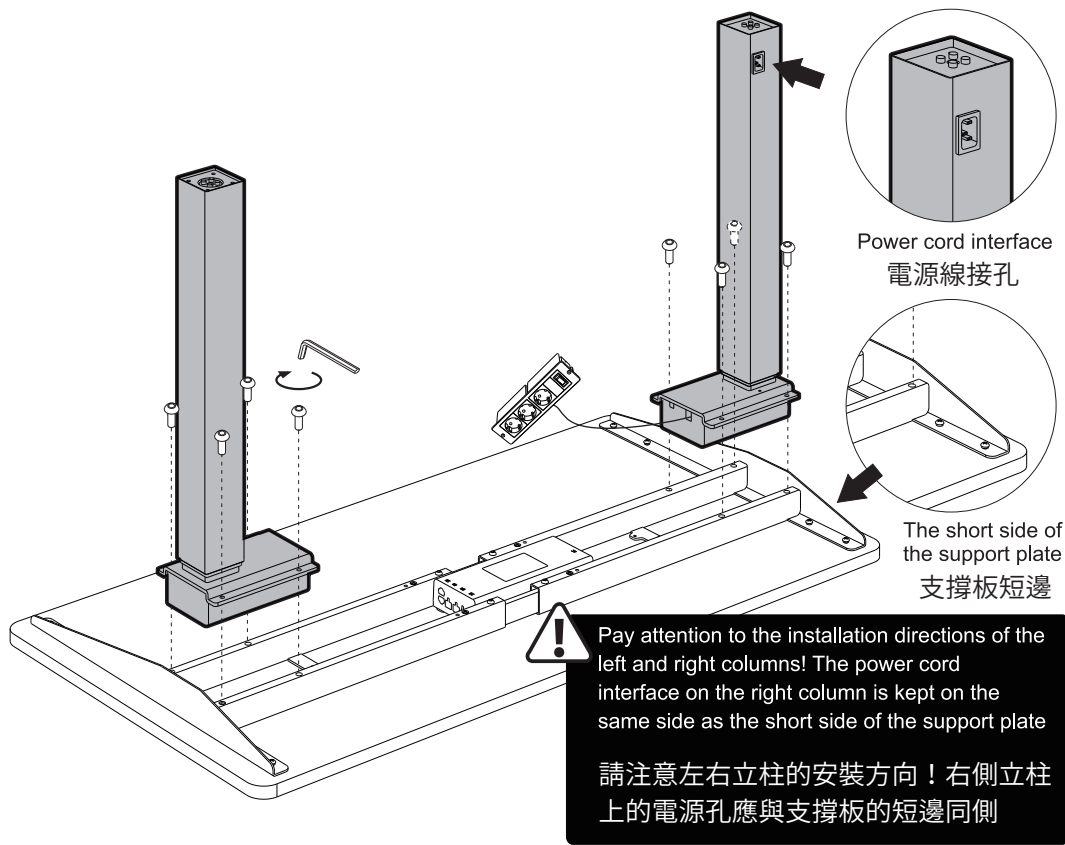

STEP6 Install the Pedestal 安裝底座


D x8 F x1

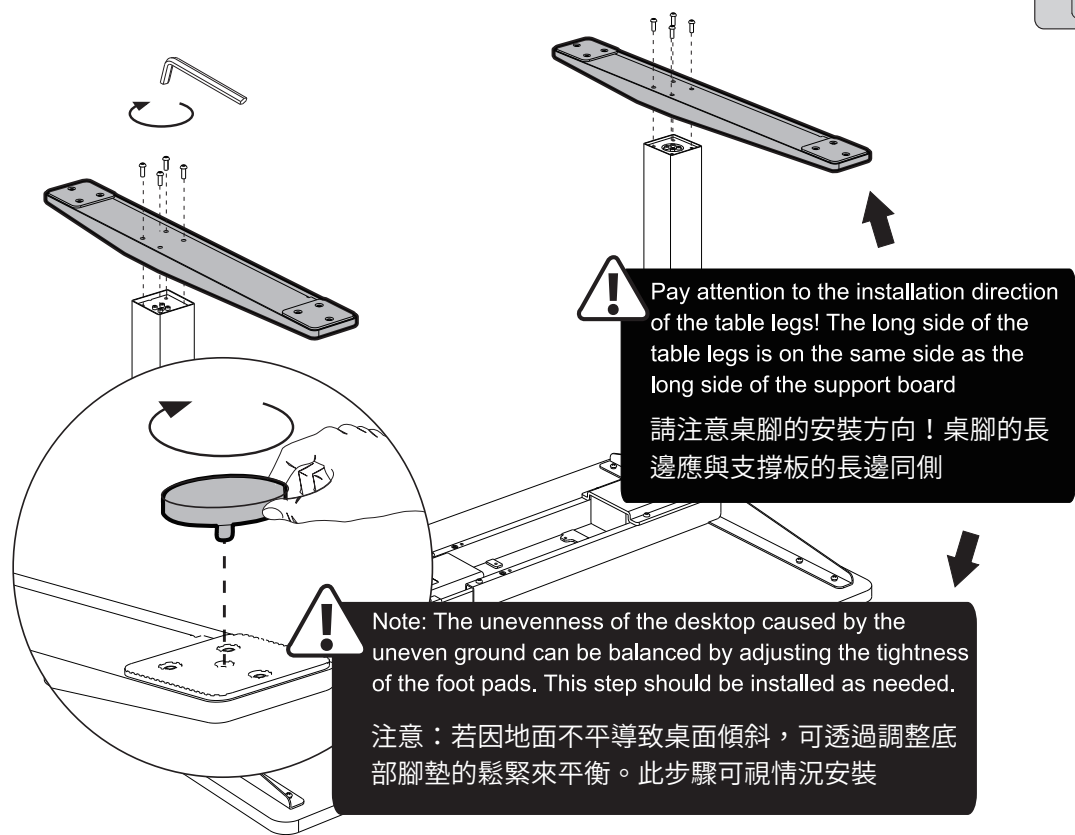

STEP7 Install the Handset 安裝手控器

E x2


Self-prepared

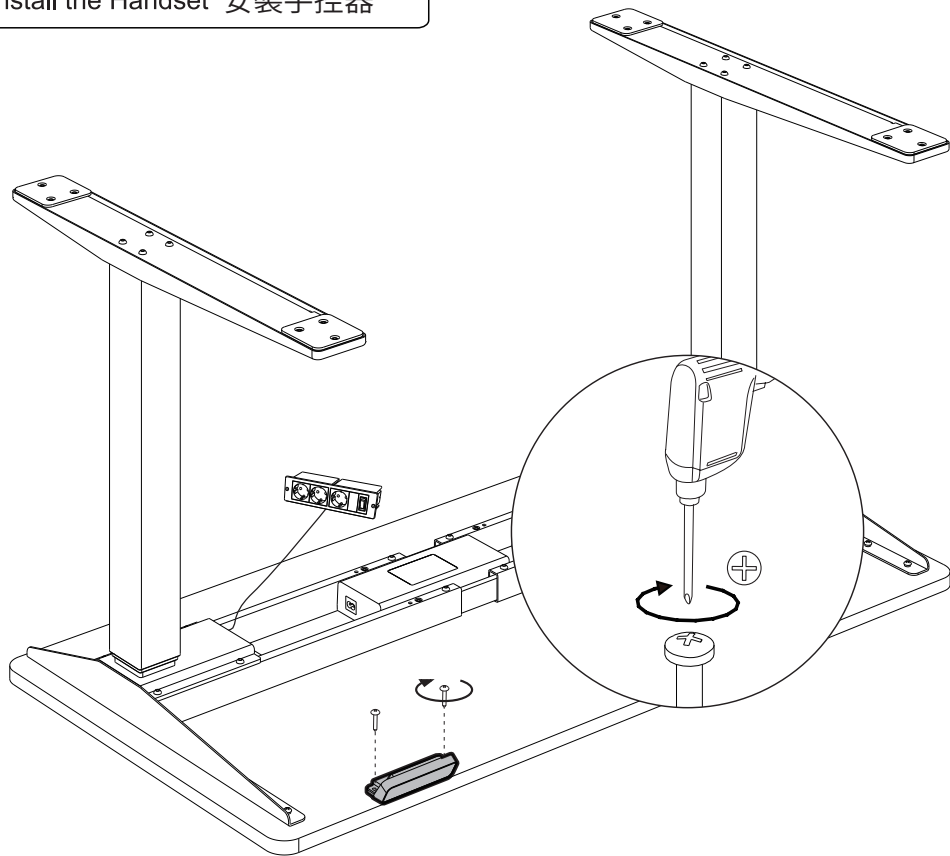

STEP8 Install the Cable management tray holder 安裝理線托架支撐件


G x3

Self-prepared

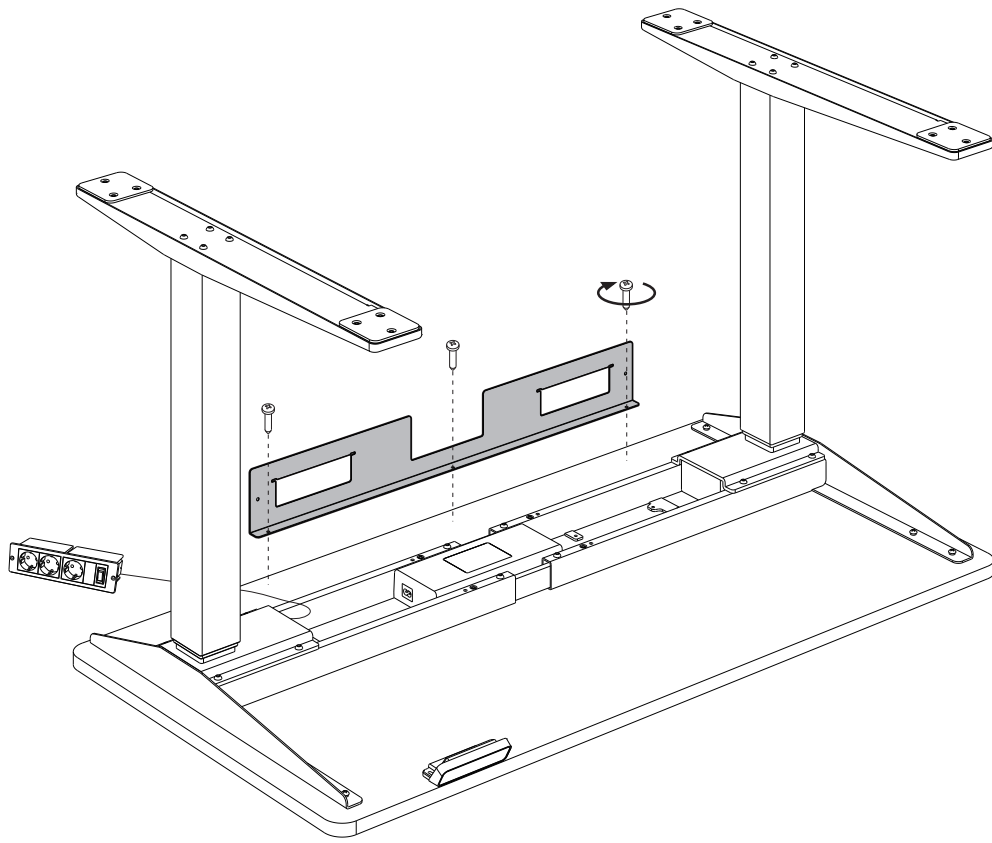


Assembly Steps 組裝步驟

STEP9 Connect the cables 連接線材

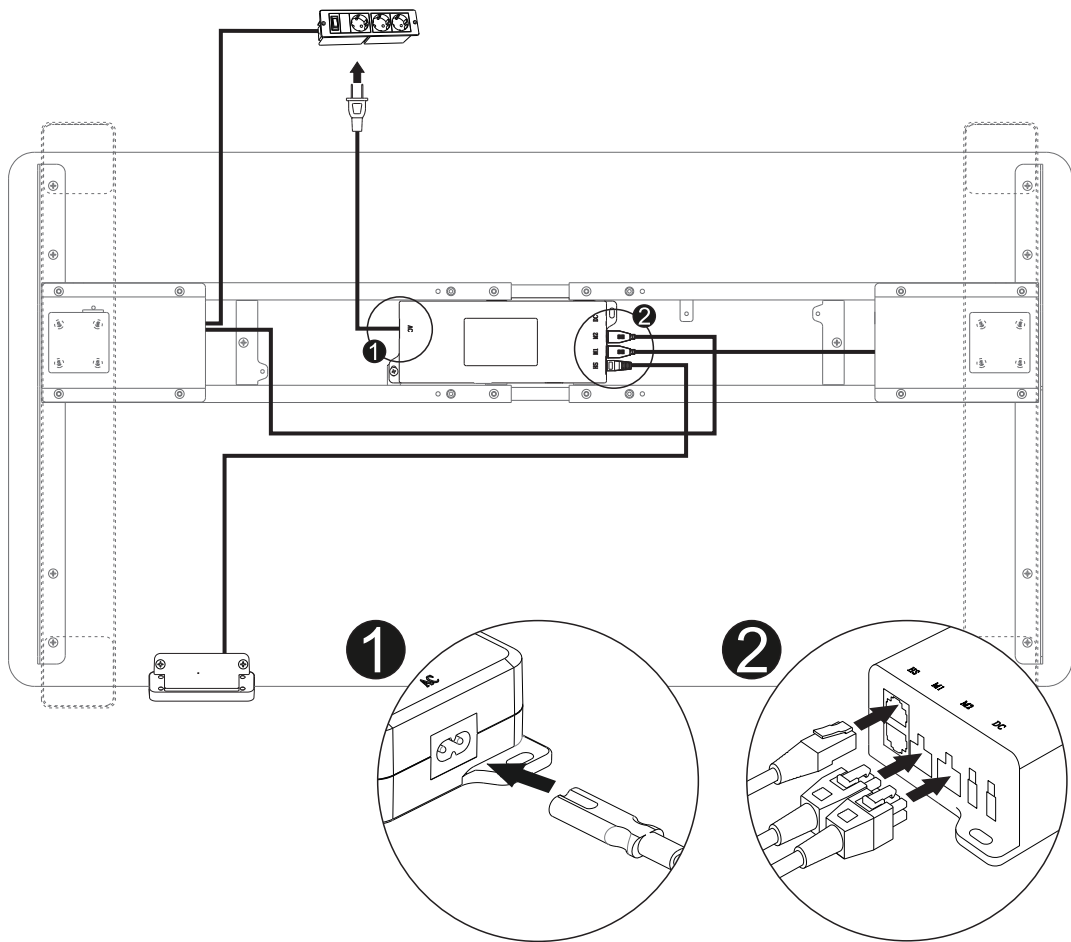


STEP10 Install the Baffle 安裝擋板

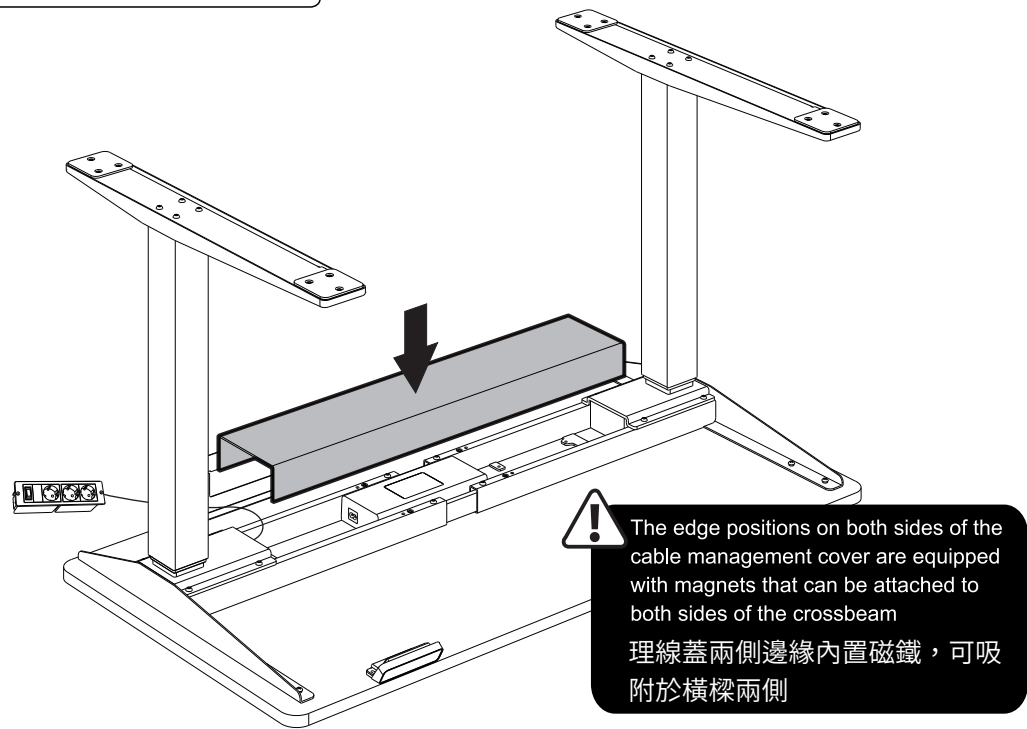

STEP11 Flip the table 翻轉桌子





STEP12 Install the Cable management tray 安裝理線托盤

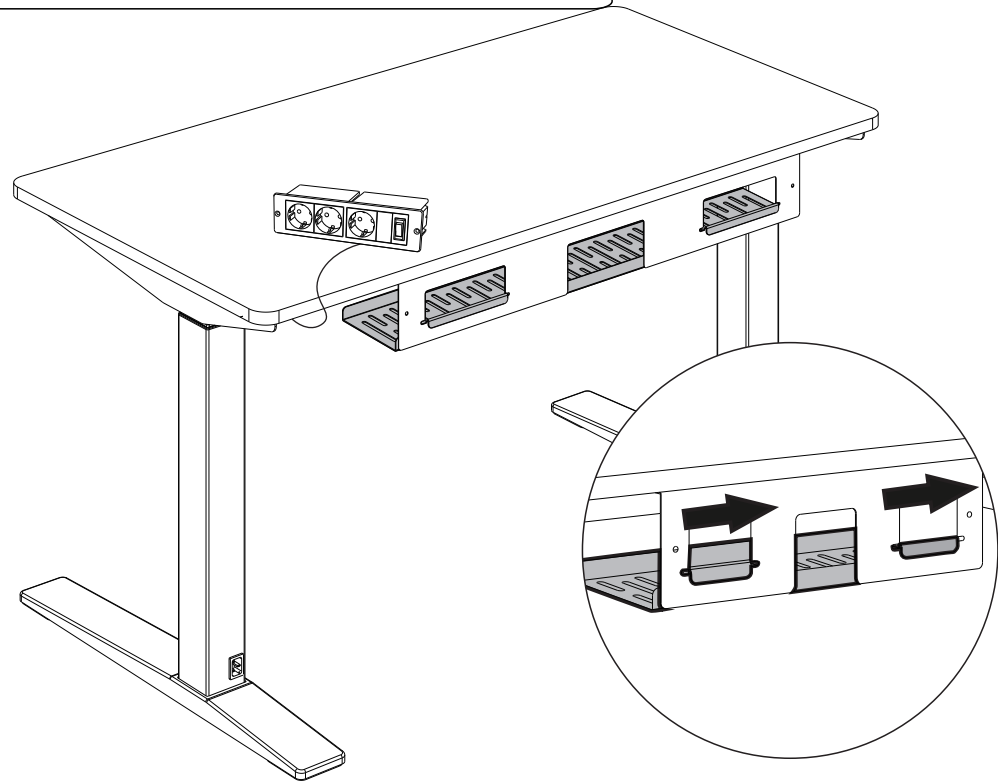


Assembly Steps 組裝步驟


STEP13 Install the power strip clamping assembly 安裝插座夾具組件

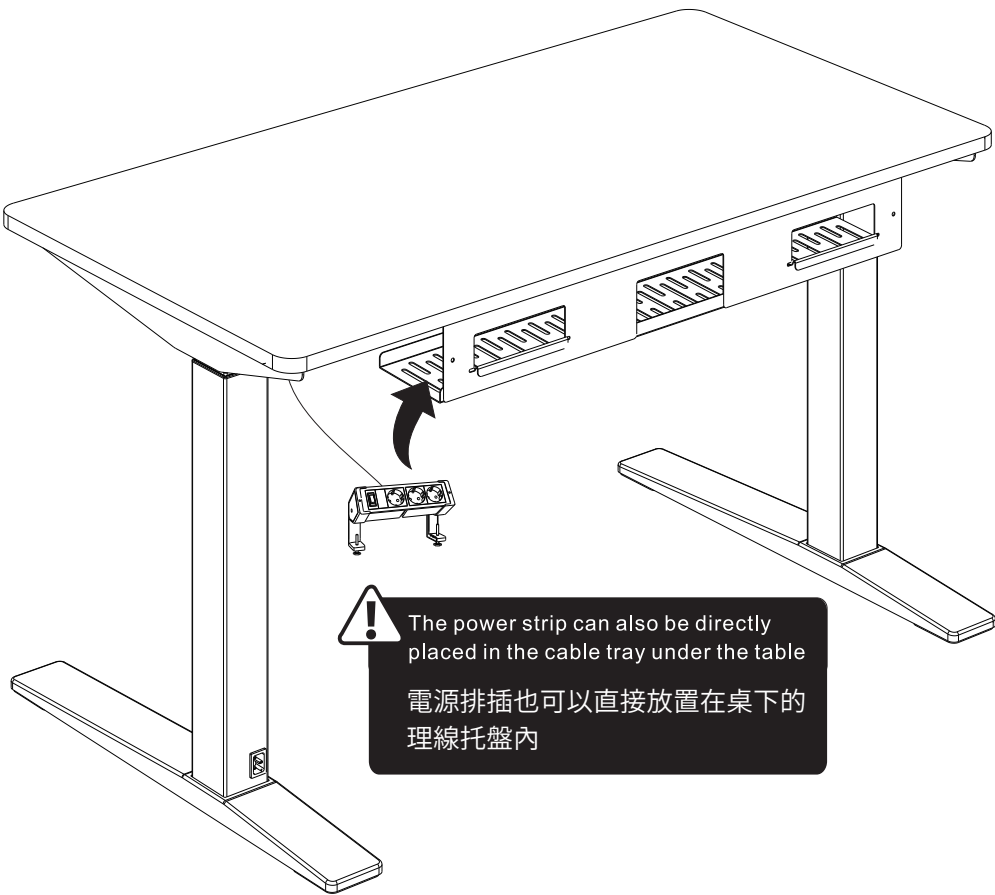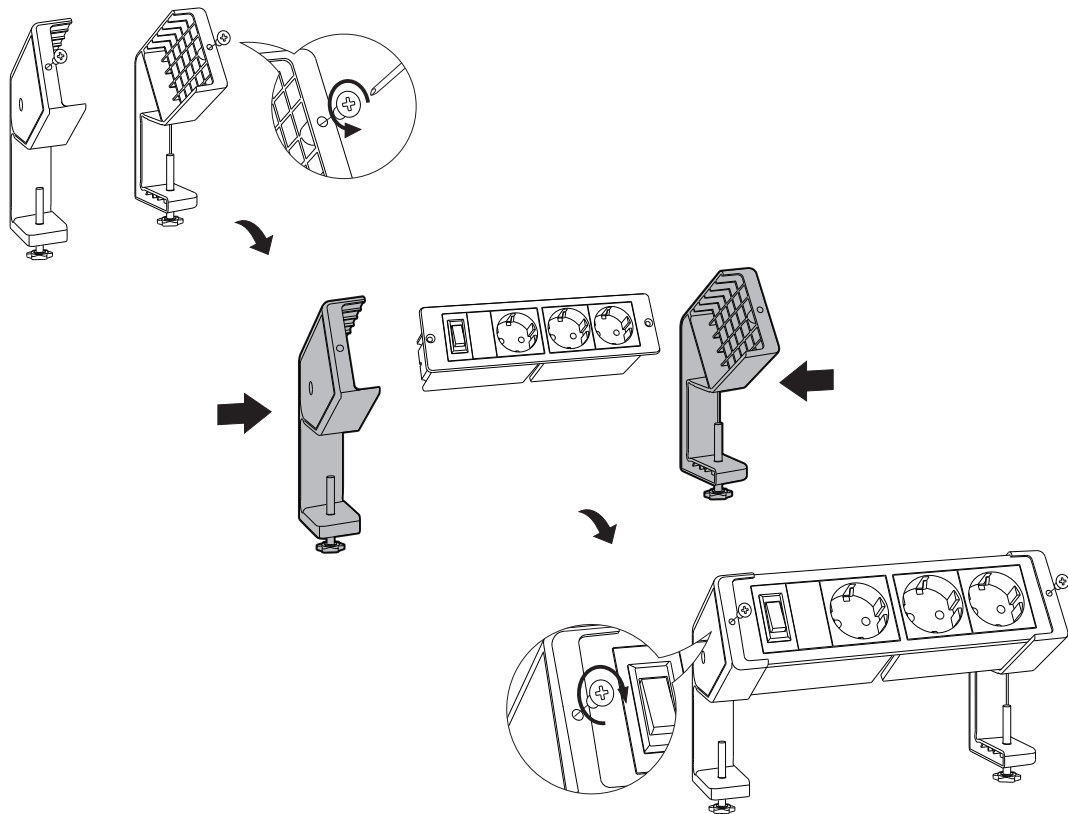

STEP14 Install the power strip 安裝電源排插

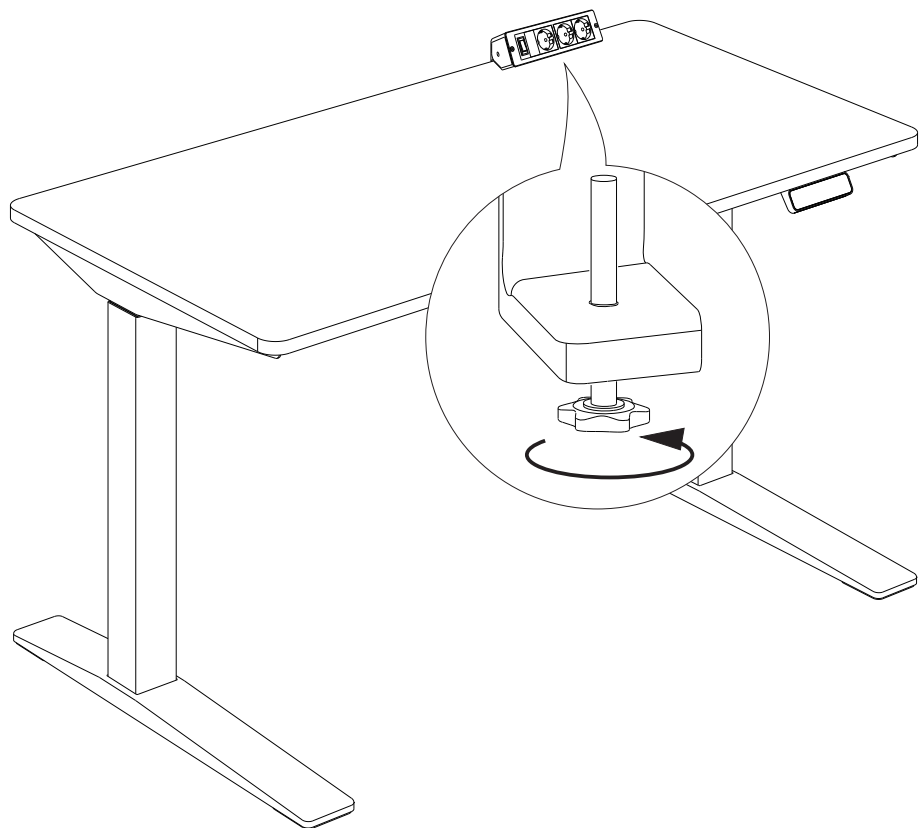

STEP15 Connect the three-plug power cord 連接三孔電源線

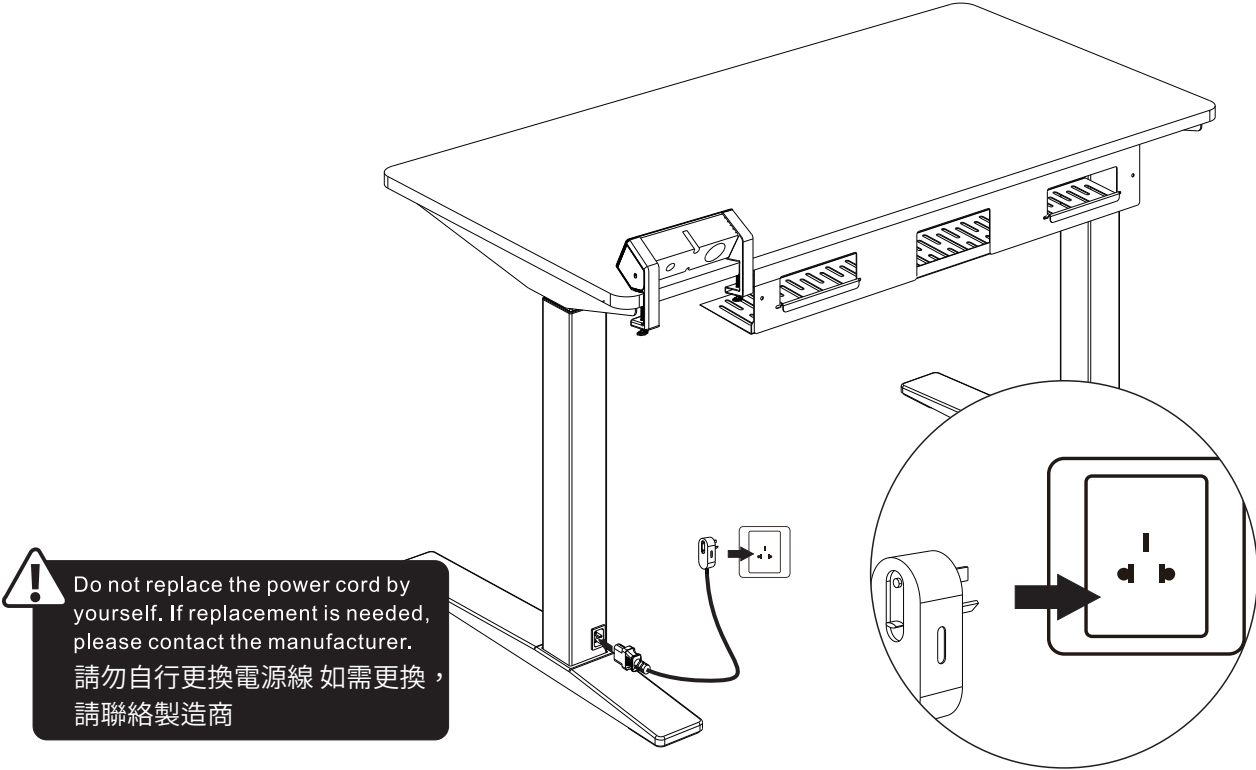


Instructions Of The Handset 手控使用說明

第一組高度：使用者儲存的第一個高度位置
The second height location saved by the user

第二組高度：使用者儲存的第二個高度位置
The first height location saved by the user

數字 3 顯示在螢幕上：使用者儲存的站立高度
The number 3 is displayed on the screen.
The user saves the standing position

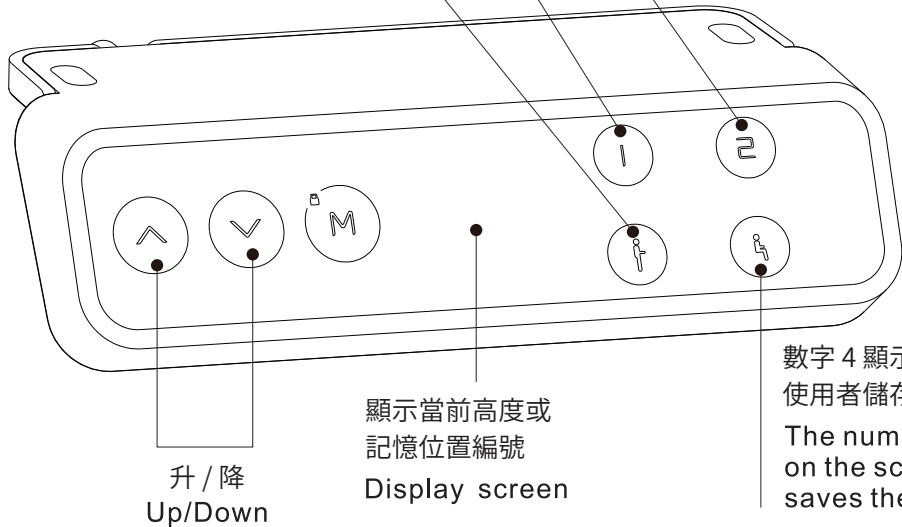

Note

Ensure that there are no obstacles blocking the movement of the table during the lifting process and confirm that all cables are long enough for the table to move up and down.


Suggestion

請確保升降過程中桌面移動路徑無障礙，並確認所有電線長度足以支援上下升降。

Set the most comfortable height when sitting as "👤" and the most comfortable height when standing as "👤". Additional preset heights can be freely set to other heights.


建議在坐姿時設定最舒適的高度為“👤”，站立時設定為“👤”。其他預設位置可自由調整為使用者所需高度。

● Child Lock Function 兒童安全鎖功能

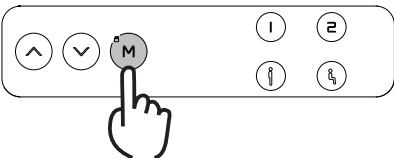


- a. When the child lock is activated, the blue indicator light for the child lock (above "▼" and "M") will illuminate. 當兒童鎖啟動時，「▼」與「M」鍵上方的藍色指示燈會亮起。
- b. Pressing any button will cause the indicat 此時按下任意按鍵將無法操作，僅有提示反應。
- c. To disable or enable the child lock, long-press the M button for about 5s.or light to flash once. 若要啟用或解除兒童鎖，請長按 M 鍵約 5 秒，指示燈閃爍一次後即切換狀態。
- d. Only by disabling the child lock function, can all buttons work normally 僅當兒童鎖功能被解除後，所有按鍵才可正常使用。

● Button Control for Height Adjustment 高度調整按鍵操作

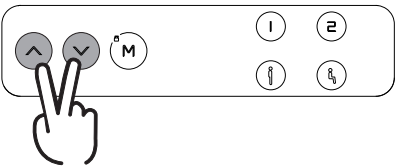


- a. By pressing the "▼" or "▲" button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.
a. 透過按下「▼」或「▲」按鍵，可調整升降桌的高度，當前高度將顯示於螢幕上。

● Height Memory Function 高度記憶功能

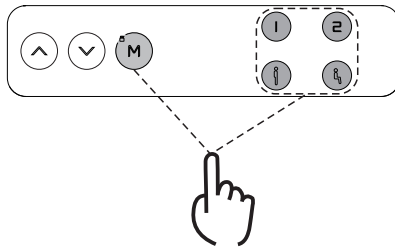

- a. Use the up or down key to adjust the height of the lifting desk to the desired level, press the "M" save button, the display screen will show "5- "; then press the "1" or "2" or "👤" or "👤" key to save the height to position 1 or 2 or 3 or 4, and the corresponding display screen will show "5- 1" or "5-2" or "5-3" or "5-4".
a. 使用「▲」/「▼」鍵將桌面升降至理想高度後，按下「M」記憶鍵，螢幕會顯示「5-」。接著按下「1」「2」「👤」「👤」任一鍵，即可將該高度儲存至對應位置，螢幕將顯示「5- 1」「5-2」「5-3」「5-4」。
- b. Press the "1", "2", "👤" or "👤" button to automatically adjust the desk to the previously saved position.
b. 日後按下「1」「2」「👤」「👤」按鍵，即可自動調整至對應儲存的高度位置。


● Adjusting Collision Sensitivity (Optional) 調整防碰撞靈敏度（選配功能）

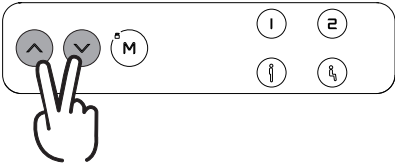

- a.Press and hold the "▼" and "▲" buttons at the same time for 5 seconds to switch the sensitivity. One operation switches one level, with 4 levels:
a. 同時長按「▼」與「▲」按鍵 5 秒，可切換防碰撞靈敏度。每次操作切換一個等級，總共 4 段靈敏度。
- b."R-0"indicating that the collision prevention function is turned off; "R-1"indicating low sensitivity; "R-2" indicating medium sensitivity; "R-3" indicating high sensitivity.
b. 顯示「R-0」代表防碰撞功能關閉；顯示「R-1」代表低靈敏度；顯示「R-2」代表中靈敏度；顯示「R-3」代表高靈敏度。
- c.When the table encounters an obstacle during the process of ascending or descending, it will immediately rebound, providing protection.
c. 當桌面升降過程中遇到障礙物時，將會立即反彈回彈，起到保護作用。
- d.If the display screen does not show any of the above codes when simultaneously holding down the "▼" and "▲" keys for 5 seconds, it means that there is no collision prevention function.
d. 若同時長按「▼」與「▲」5 秒後螢幕未顯示上述任一代碼，則代表本產品無防碰撞功能。

Instructions Of The Handset 手控使用說明

● Error Code Processing 錯誤代碼處理

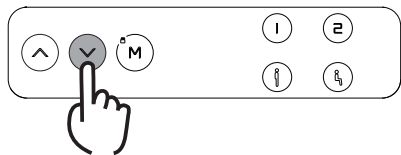

- a. Reset function definition: The LED display shows "Rst" or "rst". The user holds down the down arrow key until the desk lowers to the lowest position and then rebounds up to a stop. The display will show the lowest height. After releasing the "▼" down key, the reset is complete and the desk can be used normally again.
- a. 重置功能說明：當 LED 顯示「Rst」或「rst」時，請長按「▼」鍵，直到桌面降至最低並自動反彈停止，螢幕會顯示最低高度。此時鬆開「▼」鍵即表示重置完成，桌子可恢復正常使用。
- b. If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.
- b. 若顯示「E01」或「E02」，請讓桌子休息至少 18 分鐘後再重新使用。
- c. If there are other error codes and pressing the "▼" downward key does not respond, please check that the connecting cable is not damaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The screen will display either "Rst" or "rst". Press and hold the "▼" downward key to reset.
- c. 若出現其他錯誤代碼且按「▼」鍵無反應，請檢查連接線是否損壞或未正確接上。請關閉電源至少 10 秒後重新接上，螢幕將顯示「Rst」或「rst」，然後長按「▼」鍵執行重置。
- d. If the desk still does not function properly after performing the above steps, please contact customer service for assistance.
- d. 若以上操作後桌子仍無法正常運作，請聯繫客服尋求協助。

Resolving Common Issues 常見問題排解

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

以下提示可協助您排查與解決常見故障。若您遇到的問題未列於下表，請聯絡供應商。僅製造商或專業人員具備處理此類問題的能力。

Problem 問題	Solution 解決方法
The electronic functions are unable to operate properly 電子功能無法正常運作	Check the cable connection 檢查線材連接是否正確
Speed of lifting is slow 升降速度緩慢	Check if the load weighs more than 40kg 檢查負重是否超過 40 公斤
The worksurface slides downward 桌面自動下滑	
The device often enters the reset state 裝置頻繁進入重置狀態	
Only descending, not ascending, or only ascending, not descending 僅能下降、無法上升 或 僅能上升、無法下降	Perform a reset operation 執行重置操作
Insufficient height for ascending and descending 升降行程不足	
The bottom cannot rise 無法上升到底部	
After exceeding the working duty cycle requirements (Duty cycle: Max 2min on/18min OFF) 超過工作週期限制 (每次最多連續運作 2 分鐘，需休息 18 分鐘)	Power off for 18 minutes and then reconnect the power 關閉電源 18 分鐘後重新啟動
When pressing the down key, the device goes up instead 按下下降鍵時桌子反而上升	Check if there are any obstacles or hanging cables under the table 檢查桌下是否有障礙物或電線纏繞

Attention 注意事項

- 1.Power supply: AC100V-240V, frequency 50/60Hz.
電源供應：AC100V~240V，頻率 50/60Hz
- 2.Operating environment: Indoor, 0-40°.
操作環境：室內，溫度 0~40℃
- 3.Before cleaning, make sure to unplug the power cord. Use a slightly damp cloth to wipe away surface dust, taking care not to let water drip into the internal components or damage the connection wires. Regularly check if screws are loose and tighten them if necessary.
清潔前請務必拔掉電源線。使用微濕布擦拭表面灰塵，注意避免水滴進入內部元件或損壞連接線。定期檢查螺絲是否鬆動，必要時加以鎖緊。
- 4.The electrical box contains electronic components, metals, plastics, wires, etc. Dispose of it according to the environmental regulations of your country, not as regular household waste.
電箱內含電子元件、金屬、塑料、電線等，請依照當地環保法規妥善回收，不可作為一般生活垃圾丟棄。
- 5.Before using the product, carefully inspect and ensure that it has been correctly installed. Use only the accessories provided by the manufacturer for installation. Leave adequate safety clearance when placing the product to avoid pinch hazards.
使用前請仔細檢查並確保正確安裝。僅使用原廠提供的配件。安裝時保留足夠安全距離，以避免夾傷。
- 6.Before first use, familiarize yourself with all the functions and program settings of the product.
初次使用前，請熟悉所有功能及設定流程。
- 7.Children are not allowed to play on this product .Certain unpredictable behaviors may result from children playing on the product, and the manufacturer will not be responsible for any resulting accidents.
禁止兒童在產品上玩耍，避免突發行為導致事故，製造商不對此承擔責任。
8. Slight noises from the multi-belt or brake system caused by the structure will not affect the use of the equipment.
結構產生的多帶輪或煞車系統的輕微聲響，不影響設備使用。
9. The use of corrosive or abrasive materials for cleaning equipment is prohibited. Make sure that the cleaning agents used will not contaminate the environment.
禁止使用腐蝕性或磨蝕性清潔劑，並確保清潔用品對環境無害。
10. Operate the equipment only after understanding the relevant hazards. Children under the age of 14 or individuals with physical or sensory impairments or mental disabilities should use the equipment under proper supervision and guidance. Children should not have unattended access to the product.
僅在充分理解風險後方可使用本設備。14 歲以下兒童或身心障礙人士應在監護人指導下使用，兒童不得自行接觸設備。
11. Children should not perform cleaning and user maintenance without supervision.
兒童不得自行進行清潔與維護，須在監護下操作。

12. In case of power cord damage, it must be replaced by the manufacturer or relevant professionals to avoid injury.
電源線若損壞，請聯絡製造商或合格專業人員更換，以避免危險。
13. Ensure that your operating environment is free of any potential hazards, such as not littering tools. Always handle packaging materials with caution to avoid various potential dangers, such as the choking hazard posed by children playing with plastic bags.
確保使用環境無潛在風險，例如工具遺留。請妥善處理包裝材料，避免孩童誤食（如塑膠袋可能造成窒息）。
14. When moving the product, ensure that there are no items placed on the table, the drawers and doors are closed securely, screws are tightened, and the power plug is unplugged. Use at least 2 people for moving. If necessary, keep the original packaging for future transportation.
移動產品前，請確保桌面無物品、抽屜門已關、螺絲鎖緊、電源已拔除。需 兩人以上共同搬運。如需長期儲存，請保留原廠包裝。
15. When storing for a long time, unplug the power cord and clean out any loose objects. Store it in a cool and dry place.
長期儲存時，請拔除電源、清理雜物，並置於陰涼乾燥處。
16. This product contains small parts that can pose a choking hazard if swallowed accidentally. Keep these small accessories away from children.
本產品內含小零件，誤食可能造成窒息，請遠離孩童。

Recycling and Disposal 回收與處理

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

此標誌表示本產品不得與一般家庭垃圾一同丟棄。為避免對環境或人體健康造成潛在危害，請妥善回收本產品，以促進資源的可持續再利用。若需回收本設備，請使用當地的回收系統，或聯繫購買地的零售商協助回收。他們將協助您進行安全且符合環保規範的處理。